



## RECOMMENDED MAINTENANCE SCHEDULE

*Note: The items listed in the recommended maintenance schedule are not covered under warranty.*

| Page (1)  | UPON DELIVERY (By Dealer) | AFTER SHAKEDOWN CRUISE | AT EACH USE | EVERY (6) SIX MONTHS | EVERY (12) TWELVE MONTHS |
|---|---------------------------|------------------------|-------------|----------------------|--------------------------|
| <b>SPARS, RIG AND SAILS</b>   |                           |                        |             |                      |                          |
| Watch for chafing at spreader tips, pulpit and shrouds.   | X                         | X                      | X           |                      |                          |
| Secure turnbuckles and clevis pins with cotter pins and protect with tape.                                  | X                         |                        |             |                      | X                        |
| Tune or re-tune rigging.  | X                         | X                      |             |                      | X                        |
| Inspect all rigging, deck fittings for cracks, crevices, deterioration, kinks, or other unusual conditions. | X                         |                        |             | X                    |                          |
| Make sure all rigging functions correctly.  | X                         |                        | X           |                      |                          |
| Clean or lubricate sheaves as required.   |                           |                        |             | X                    |                          |
| Strip down, clean and lubricate winches   |                           |                        |             |                      | X                        |
| Rinse off blocks, sheets, lines and furling unit drum.  |                           |                        | X           |                      |                          |
| <b>ENGINE</b>   |                           |                        |             |                      |                          |
| Check all hose clamps, cable straps and mounting bolts for tightness.                                       | X                         | X                      |             | X                    |                          |
| Check engine and gear oil level.  | X                         |                        | X           |                      |                          |
| Check fuel level and water accumulation in filter/separator.  | X                         |                        | X           |                      |                          |
| Check coolant level.  | X                         |                        | X           |                      |                          |
| Check all warning lamp functions.   | X                         |                        | X           |                      |                          |
| Check for seawater discharge at exhaust.  | X                         |                        | X           |                      |                          |
| Inspect engine for oil leak or water leaks.   | X                         |                        | X           |                      |                          |
| Check shaft packing gland drip rate.  | X                         | X                      |             | X                    |                          |
| Inspect and clean raw water intake strainer.  |                           |                        | X           |                      |                          |
| Replace engine mounted fuel filter and remote filter separator element.                                     |                           |                        |             |                      | X                        |

| <b>Recommended Maintenance Schedule Page (2)</b>   | <b>UPON DELIVERY (By Dealer)</b> | <b>AFTER SHAKEDOWN CRUISE</b> | <b>AT EACH USE</b> | <b>EVERY (6) SIX MONTHS</b> | <b>EVERY (12) TWELVE MONTHS</b> |
|--|----------------------------------|-------------------------------|--------------------|-----------------------------|---------------------------------|
| <b>ENGINE (CONTINUED)</b>  |                                  |                               |                    |                             |                                 |
| Change engine oil. (See engine manual for complete engine schedule)  |                                  |                               |                    | <b>X</b>                    |                                 |
| Check shaft alignment.   | <b>X</b>                         |                               |                    | <b>X</b>                    |                                 |
| Inspect propshaft, nuts and cotter pins. On Saildrives inspect blades, pins, and fasteners.  | <b>X</b>                         |                               |                    | <b>X</b>                    |                                 |
| Inspect Zincs.   |                                  | <b>X</b>                      |                    | <b>X</b>                    |                                 |
| Check packing in stuffing box and change as required.  |                                  |                               |                    |                             | <b>X</b>                        |
| Spray all electrical connections with WD 40 or similar lubricant.  |                                  |                               |                    | <b>X</b>                    |                                 |
| Inspect and burp dripless shaft seal.  | <b>X</b>                         |                               | <b>X</b>           |                             |                                 |
| <b>PLUMBING SYSTEMS</b>  |                                  |                               |                    |                             |                                 |
| Clean out bilge and sump debris strainer.  | <b>X</b>                         |                               | <b>X</b>           |                             |                                 |
| Clean out water system debris strainer.  | <b>X</b>                         | <b>X</b>                      |                    | <b>X</b>                    |                                 |
| Inspect all fittings for leaks.  | <b>X</b>                         | <b>X</b>                      |                    | <b>X</b>                    |                                 |
| Lubricate Head   |                                  |                               |                    |                             | <b>X</b>                        |
| Lubricate sea cocks  |                                  |                               |                    |                             | <b>X</b>                        |
| <b>STEERING SYSTEMS</b>  |                                  |                               |                    |                             |                                 |
| Inspect packing, stuffing box.   |                                  | <b>X</b>                      |                    | <b>X</b>                    |                                 |
| Lubricate Nylon bearings with WD40   |                                  |                               |                    |                             | <b>X</b>                        |
| Inspect bolt assemblies for tightness and lubrication. Oil bearing areas, check adjustment of quadrant, grease mating areas, oil support bearings on seat face, oil shaft bearings on each side of pinion gear. (Rack and Pinion System) | <b>X</b>                         |                               |                    | <b>X</b>                    |                                 |
| Inspect and lubricate sheave bearings. (Chain and Cable System)  |                                  |                               |                    | <b>X</b>                    |                                 |
| Inspect and oil wire rope, chain and pedestal shaft bearings. (Chain and Cable System)   |                                  | <b>X</b><br>(Inspect Tension) |                    |                             | <b>X</b>                        |
| <b>ELECTRICAL</b>  |                                  |                               |                    |                             |                                 |
| Inspect all navigation lights for operation.   | <b>X</b>                         |                               | <b>X</b>           |                             |                                 |
| Inspect Batteries/charger for correct operation.   | <b>X</b>                         |                               | <b>X</b>           |                             |                                 |

**Note: See all of the installed parts manuals for additional maintenance procedures.**